

Useful Tips.

System Performance.

Your DVS® will help provide a healthier, drier living environment. Soon after installation, if in a cooler month, the house should feel fresher and drier. Typically within a week or two you will also see evidence of this in a reduction of condensation and dampness through the home.

Each system is calibrated (set) to the size of your home. For example; a 100m² home will be set to "10". A 150m² home will be set to "15". However, if you are still experiencing some moisture issues, increase the fan speed (Air supply rate) by setting the system to a larger house size. If the system is working well and your home is drier, you may be able to select a lower air supply rate.

Note: Maintaining comfortable living temperatures in the home is a key to achieving maximum DVS® performance. To get the best out of your DVS® EC Automatic Plus in cool conditions, use home heating if needed.

If you are getting regular performance issues e.g. wet windows, turn the system off and call 0800 387 387 so that we can assist with this issue.

Filter(s).

For best results the filter(s) needs to be changed annually. Over time the filter(s) can become blocked resulting in poor performance of the system.

To ensure system efficiency and cover under the DVS® Five Year Warranty, the filter(s) should be replaced annually with a genuine DVS® filter.

Call us on 0800 387 387 or visit www.DVS.co.nz to purchase filters.

Five Year Warranty.

DVS® Manufactured and branded products carry a 5 year on site parts and labour warranty. The warranty is dated (begins) on the day of installation and/or supply of the goods.

Non DVS® manufactured and branded products are not manufactured by the company. Non DVS® manufactured and branded products therefore, carry the warranty provided by the specific product manufacturer.

The warranty covers manufacturing faults in the product (equipment) and product failure caused by incorrect installation.

DVS® EC Automatic Plus Installed on: _____

Installed by: _____

Invoice Number: _____

Filter(s) type and number:

F7 MERV13


F6 Carbon MERV12



DVS® EC Automatic Plus

With Automatic Heat Recovery Function


User Guide

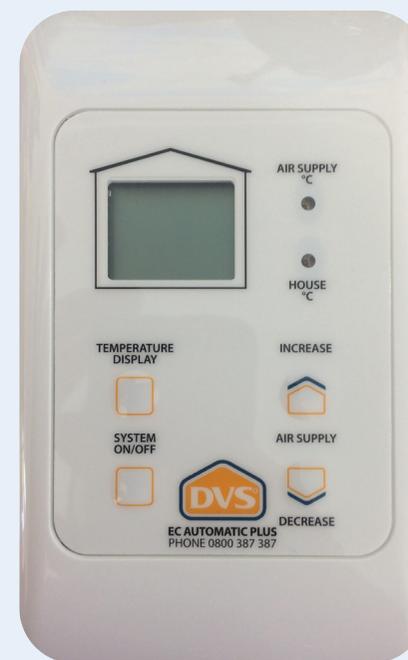

Enjoy a healthier, more comfortable home

0800 387 387 www.dvs.co.nz

Displayed on the home screen.

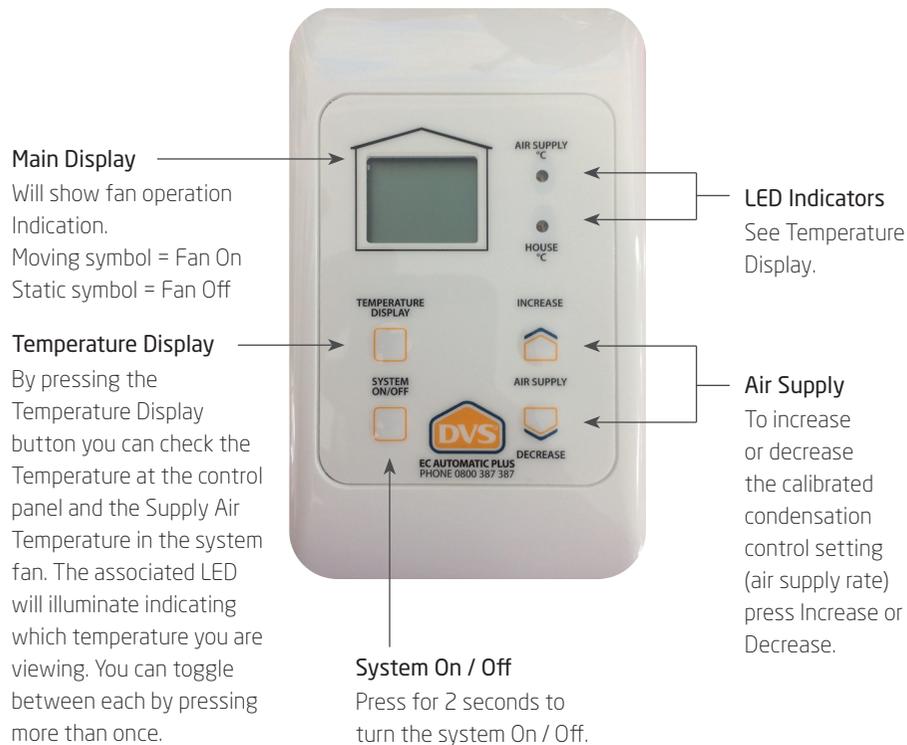


Automatic Heat Recovery Function

The DVS® EC Automatic Plus has a pre-programmed Heat Recovery Function. The installer has programmed this, matching the air flow rates to your home, when the system was installed.

This function increases the air flow rate automatically when the supply air temperature (measured in the system fan) rises above the pre-set temperature (typically 19°C).

The system will continue to supply air at an increased flow rate until the system automatically stops at the pre-set high temperature cut-out (typically 27°C).

Note: There is no indication on the control panel to show the system is in Heat Recovery Mode.

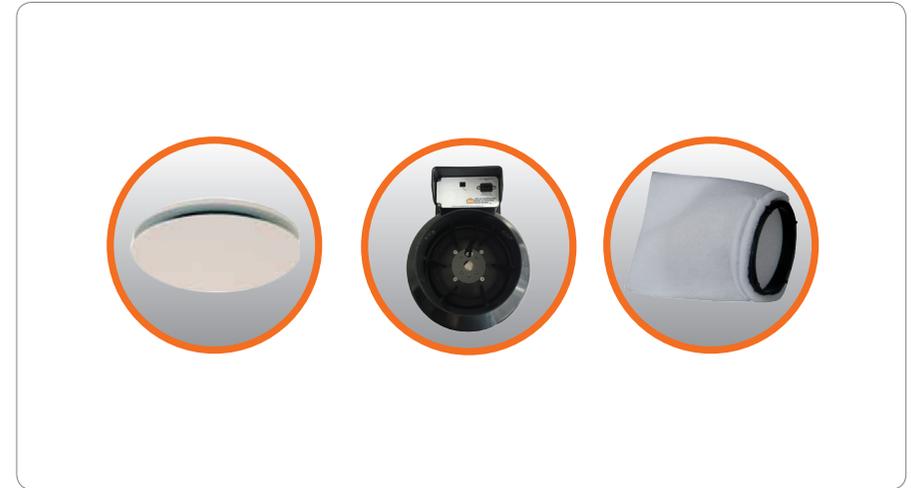

Main Display

Pressing either  or  while displaying House temperature or Supply temperature will change to displaying the FAN ON or FAN OFF indication.

Turning high temperature cut out on and off (Factory set to 27°)

Holding down the  button for 5 seconds will enter the shortcut for setting the High Temperature Cut out. Both LEDs (house and supply) will flash.

The system will shut off when the supply air is above this temperature.

The display will show the current High Temp cut out temperature, or "OF" if the feature is off. Pressing  or  will change the cut out temperature, and ensure the High Temperature cut out feature is activated.

The feature can be turned off by pressing  or  until "OF" is displayed.

After 15 seconds without pressing a button, the menu will exit and return to Fan Operation ON / OFF display.

Please note: 'OF' on the controller means 'OFF'