



### **G4 small in line Filter fitting instructions.**



### **If you have a Small inline filter tube.**

- Switch off the unit by unplugging the three pin plug near the DVS fan in the ceiling.
- Find the small inline tube. Look over the length of supply ducting up to the fan unit. It will be there.
- Undo the tape around the end and pull the ducting off. You will see the old filter. (The filter can go in both ends so you may need to remove the ducting off the other end to get the filter out).
- Pull the old filter out of the tube.
- Remove the new small inline filter from the plastic bag.
- Pull the filter out to its full length and slide the filter into the housing so that closed end is out the other end of the housing and into the ducting.
- Push the collar in, so that it sits hard against the flange halfway down the tube.
- Slide the ducting back over the filter housing and tape in position.
- Plug the unit back in and turn it on from the control panel in the house. (See the back of this page to reset the filter reminder or the filter warning light).

**For further assistance please call DVS on 0800 387 387 or [www.dvs.co.nz](http://www.dvs.co.nz)**

## **Resetting the system clock (where applicable), the filter reminder or the filter warning light.**

### **DVS G4**

Models distinguished by a small, coloured LED screen.

You will need to reset the filter reminder timer. Press the MENU button then the up and down arrows to select UTILITES, then select Filter Reset, Press OK and follow the screen prompts.

### **DVS G3**

Models distinguished by a square grey, LCD touch screen.

First, you will need to reset the clock. Touch the screen and then follow the prompts.

To reset the filter reminder timer. Press MENU - MORE – MORE – FILTER – Press UP and DOWN arrow until you reach the required months (12). Note, it automatically resets to 12 months.

### **DVS 1 or 5**

Models distinguished by the mid or light Grey key pad. These models also include:

- Summer / winter selection button on the bottom right side of the control panel.
- Warm / cold roof temp indication on the bottom left side.
- There may also be an Air warmer button and/or an Auto summer vent button. However these were optional extras and may not be present.

To reset when the filter light is flashing:

Press and hold down the summer / winter selection button, the air change lights will flick up to 6 lights then disappear, the filter light will go off.

If filter light has stopped flashing:

Press and hold summer / winter select button. The summer / winter lights will flash. Use up arrow to add 6 complete lights on air change scale (6 lights = 12 months).

### **DVS 5E**

Models distinguished by:

This model has no Warm/Cold indicator. Mid or light Blue coloured key pad.

**NOTE:** Some DVS5E models do not have a filter reset indicator or any lights, so, no reset is required.

There are **two** versions:

(Take off the switch cover and look for the **V** number on the sticker to one side)

#### **V 1.2.4** (Typically up to 2007)

- Press and release the up and down arrows at the same time, the summer / winter light will start flashing. Press the summer / winter select button 2 times. Use the up arrow until you see 6 complete lights showing on the air change indicator (6 lights = 12 months). Press the summer / winter select button once more. The summer / winter lights will stop flashing and the filter light will disappear.

#### **V 1.2.5** (Typically 2007 onwards)

- Press and hold summer / winter selection button to reset, this is the **same as the DVS1/5 models explained above.**

### **DVS Air Transfer (ATS)**

To reset the filter light, press POWER and SELECT buttons together. This will automatically reset the filter time out period to 12 months. If the filter light is not flashing, pressing the two buttons together will take the unit into filter time out display mode with both the HEAT and COOL lights flashing. Time until the filter is due for changing will be displayed as a bar graph starting from the green LED upwards. Each full brightness is two months so 8 LEDs is 16 months. We recommend a maximum of 12 months, or 6 full LED's. To exit the display mode press the two buttons again.

**For further assistance please call DVS on 0800 387 387 or [www.dvs.co.nz](http://www.dvs.co.nz)**