

Useful Tips.

System Performance.

Your DVS® will help provide a healthier, drier living environment. Soon after installation, if in a cooler month, the house should feel fresher and drier. Typically within a week or two you will also see evidence of this in a reduction of condensation and dampness through the home.

Adjust the system if you need to.

Each system is calibrated (set) to the size of your home. However, if you are still experiencing some moisture issues, increase the fan speed (Air supply rate). If the system is working well, you may be able to select a lower air supply rate.

Note: Maintaining comfortable living temperatures in the home is a key to achieving maximum DVS® performance. To get the best out of your DVS® Reclaim, in cool conditions, use home heating if needed or in warmer conditions, use home cooling if needed.

If you are getting regular performance issues e.g. wet windows, turn the system off and call 0800 387 387 so that we can assist with this issue.

Filters.

For best results the filter(s) needs to be changed annually. Over time the filter(s) can become blocked resulting in poor performance of the system. A message will show on the controller when your filter(s) are due to be changed.

To ensure system efficiency and cover under the DVS® Five Year Warranty, the filter(s) should be replaced annually with genuine DVS® filters.

Call us on 0800 387 387 or visit www.DVS.co.nz to purchase filters.

Five Year Warranty.

DVS® Manufactured and branded products carry a 5 year on site parts and labour warranty. The warranty is dated (begins) on the day of installation and/or supply of the goods.

Non DVS® manufactured and branded products are not manufactured by the company. Non DVS® manufactured and branded products therefore, carry the warranty provided by the specific product manufacturer.

The warranty covers manufacturing faults in the product (equipment) and product failure caused by incorrect installation.

DVS® EC Reclaim Plus Installed on:

Installed by:

Invoice Number: _____

Filter(s) type and number:

F7 MERV13

F6 Carbon MERV12



DVS® EC Reclaim Plus



User Guide



Enjoy a healthier, more comfortable home

0800 387 387 www.dvs.co.nz

Displayed on the home screen.

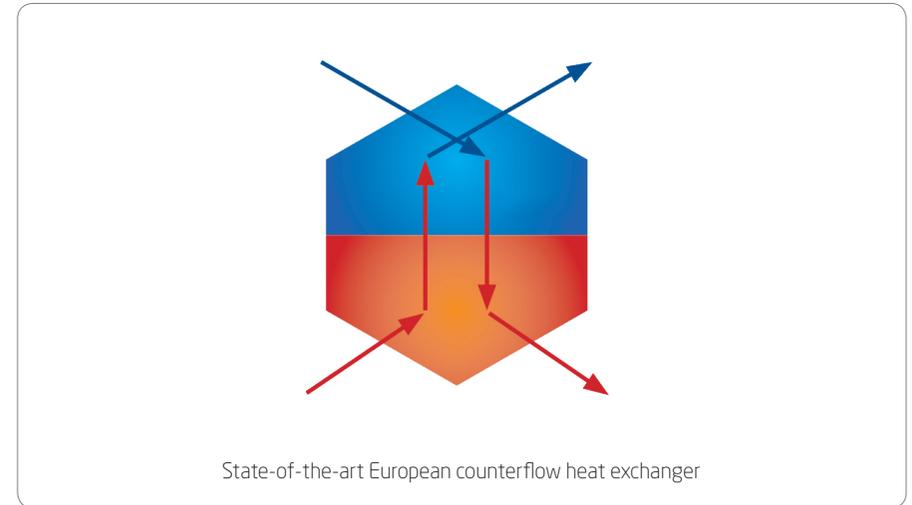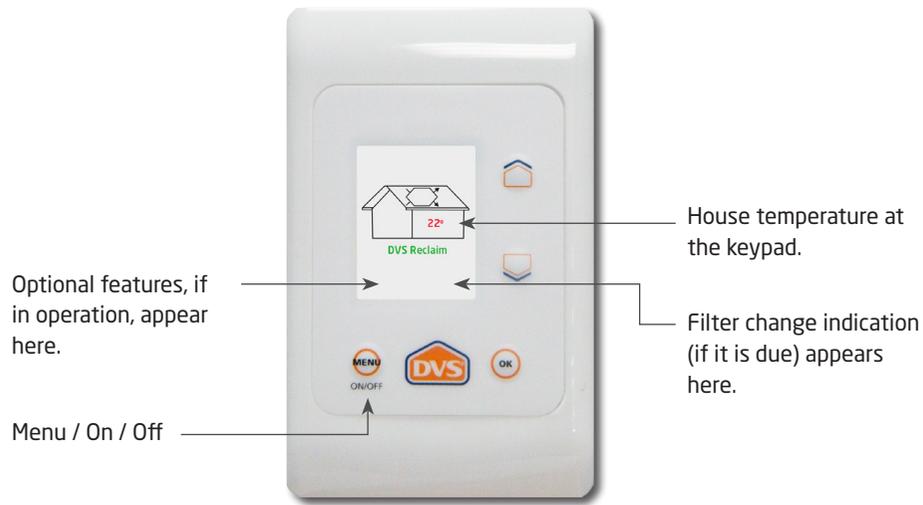

Turning the system ON or OFF: Press and hold **MENU** to turn the system on or off.

ON/OFF

Standard features:

To access the standard features.

Press the **MENU** button. (This changes the screen to the first menu). Then move the highlight by using to select the desired function and press **OK** to enter that function. Press the **MENU** Button at any time to return to the previous screen.

Fan Tune.

Fan Tune. This allows you to adjust the condensation control fan speed (Air supply rate) by +/- 50%.

Note: This is the pre-set fan speed for your home. Your system will operate at this fan speed at all times.

Fan Boost. (Activate by holding down for 3 seconds). When in fan boost, the system will run at maximum speed (max air supply rate) for a set amount of time, and then it will revert back to normal operation.

Utilities.

Setting the time, backlight off/on, system timer, resetting the filter timer, temperature graphs, and diagnostics.

Optional features:

These include:
Summer Vent Bypass,
Solar Gain and
Tempervents (Air Warmers)

To access the optional features (if fitted).

Press the **MENU** button. (This changes the screen to the first menu) Then move the highlight by using the arrows to select the desired option and press **OK** to select that option.

Mode: The way you want the optional feature to be activated. (Follow the prompts at the bottom of each screen when setting).

Fan Speed: (Summer Vent Bypass and Solar Gain only). The fan speed the optional feature will operate at when it is active.

Remember: Where you leave the highlight, is the mode in which the feature will operate in. If a feature is currently on (active), it will show on the home screen in red.